


INSTALLATION AND OPERATION

CLEANING unplug the refrigerator

- To maintain proper refrigerator performance, the Condenser coil must be free of dust, dirt, and grease.
- This will require periodic cleaning. Condenser fins should be cleaned at least every three months (90 days) or needed.

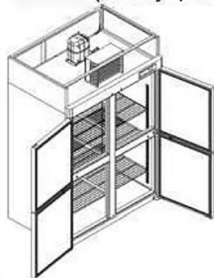

CLEANING THE INTERIOR AND EXTERIOR

- Please clean the product with a soft damp cloth! When the product is too dirty, please use the cloth with a little of neutral detergent!
- Pull out the shelves to clean!
- Be sure not to use thinner, oil, water, iron brush, abrading agent, hydrochloric acid and other things to clean




CLEAN THE GASKET

- Much grease, food wastes etc will destroy the surface of gasket, especially the bottom side!
- Please use the cloth with neutral detergent to wipe the gasket.



CHECK AFTER CLEANING


- Check the unit again for safety
- Check that the unit is operating properly.
- Make sure both power and plug are normal.
- Please read the operation manual carefully before operating the product.
- Please make sure the product is well sealed.
- Please place the product for a while to make it dry before use.

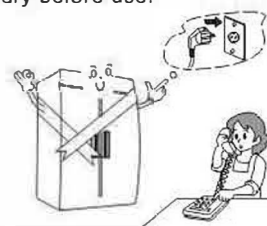

PRECAUTIONS


THE UNIT WITHOUT USE FOR A LONG TIME

- Please empty the refrigerator then unplug it.
- Please lock the door to prevent people from entering the unit.

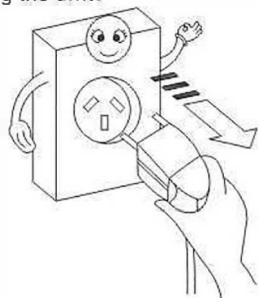


TRANSIT OR MOVE

- Please unplug the refrigerator before transit or move
- Please ask more people to work when the product is heavy.
- Please reread the manual after moving then use the unit.

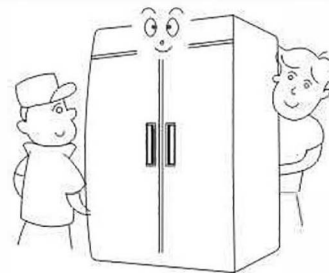


INTRODUCTION OF K-SERIES PRODUCT

WORK TOP

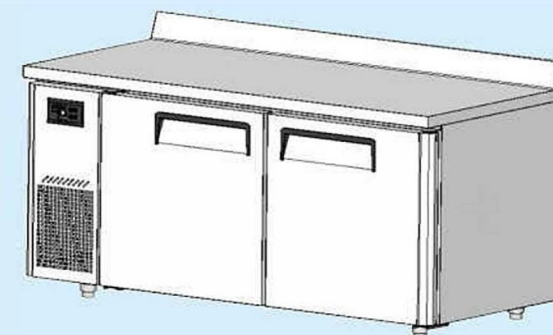

REFRIGERATOR	FREEZER
KWR9-1-N	KWF9-1-N
KWR12-2-N	KWF12-2-N
KWR15-2-N	KWF15-2-N
KWR18-3-N	KWF18-3-N

SALAD TABLE (WITH HOOD)

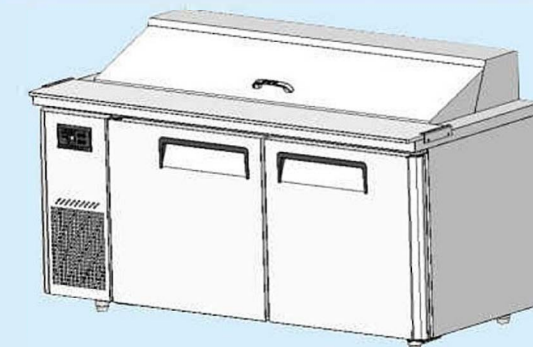

REFRIGERATOR

KHR9-1-N
KHR12-2-N
KHR15-2-N
KHR18-3-N

GLASS DOOR



REFRIGERATOR	FREEZER
KGR9-1-N	KF25-1G-N
KGR12-2-N	KF25-2G-N
KGR15-2-N	KF45-2G-N
KGR18-3-N	KF45-4G-N
	KR65-3G-N
	KR65-6G-N